

MINI CLOCK DELUXE



USER MANUAL

FC CE

THANK YOU FOR CHOOSING THE MINI CLOCK CAM

Please read this manual before operating and keep it handy.

This product is a high-resolution remote controlled video surveillance clock with an external TF Card. This versatile device records video and audio, as well as takes still photos. Both video and stills can be taken using the motion detection setting. Its high-capacity battery supports video recording for up to 12 hours continuously and audio recording for up to 25 hours continuously. It supports 32GB TF/SD card storage.

Your purchase includes:

- 1 x alarm clock
- 1 x remote control
- 1 x software disc
- 1 x USB cable
- 1 x USB power adapter

Contact **770-694-6921** if you are missing any of these components.

SETTING THE TIME AND ALARM

The current time is displayed on the 3.5 bit LCD panel on the front of the device

There are five buttons below the LCD panel called HR, MIN, SET, LIGHT, and TALK/SNZ.

First you will set the time, next the alarm.

1. To set the time, first press the SET button.
2. Press the HR key until the correct hour is chosen.
3. Press the MIN key until the correct minutes is chosen.
4. Press the SET button again to set the time and move to the next screen.
5. To set the alarm, press the HR key until it displays the hour you want and press SET.
6. Press the MIN key until it displays the minutes you want and press SET.
7. To switch between alarm options, press MIN.
8. After you have set the time, you can toggle between civilian and

military time by pressing the hour button.

9. Press the LIGHT button to turn on the backlight.

OPERATING THE DVR

PREPARING THE DEVICE FOR USE

1. Remove the plastic tab between the battery and connection.
2. Slide up the black panel on the right side of the device.
3. **Turn it on:** Flip the switch from off to on.
4. **Charge the device:** Insert the mini USB end of the cord into the place marked "USB". Insert the USB end of the cord into the PC or into the adapter to charge from the wall. Charge the device for at least 4 hours.
5. **Add memory:** Insert a microSD card into the slot labeled TF next to the place marked USB.
6. Place your device where you want to record.

USING THE REMOTE CONTROL

The remote control has five buttons.



Power



Take Photos



Record Video



Record Audio



Motion Detection

1. Turn the camera on by pressing the power button once. You should see a blue light.
2. Choose an option for recording.

Video: Press the Record Video button to begin recording. You will see a blue light flash three times before it begins.

Photos: Press the Take Photos button once to enter photo taking mode. Press the button again to take a photo.

Audio: Press the Record Audio button to begin recording audio. You will see a blue light flash three times before it begins.

Motion Detection: Press the Motion Detection button to enter motion detection mode. You will see the blue light flash quickly.

3. The battery lasts 12 hours.

RETRIEVING FILES TO PC

1. Insert the mini USB end of the USB cord into the place marked "USB".
2. Insert the USB end of the USB cord into the slot on your PC.
3. Navigate to the DCIM1000 folder to retrieve your files.

TROUBLESHOOTING

THE DEVICE WON'T TURN ON.

Remove the plastic tab between the battery and connection.

Check to see if the switch on the right side of the device has been moved from off to on.

Charge the device for at least four hours before first use.

The charging cord must be securely inserted into the device and into the wall.

THE DEVICE ISN'T CHARGING.

Replace the battery or adapter.

BLUE INDICATOR LIGHT FLASHES RAPIDLY.

This is the low power reminder. Restart and charge the camera.

REMOTE CONTROL WON'T WORK.

Remove the tab.

Replace the battery

COMPUTER DOESN'T RECOGNIZE THE DEVICE.

Press power button on remote after you connect to PC.

Check that SD Card is in the device.

Try using another USB slot.

Replace the data cable.

THE TIME DISPLAY IS UNCLEAR.

The device needs charging.

SOUND AND VIDEO UNCLEAR

The device needs charging or you need to delete files off the SD card.

OTHER PROBLEMS.

Call technical support at **770-694-6921**.

Megapixels	2.0
Resolution	640*480 1280*960
Video format	AVI
Frames per second	30 fps
Vision angle	72°
Motion detection	6 m
Lux rating	1 LUX
Battery capacity	2200MA
Recording time	12 hours+
Range for remote	15 m
Range for detecting sound	40 m
Power consumption	130MA / 3.7V
Storage temp	20~80°C
Working temp	10~60°C
Working humidity	15~85% RH
Type of memory	MicroSD card
Capacity of memory	32GB max
Player software	Media player/ KM player
USB Interface	USB1.1/2.0
Operating system	WIN 2000/XP / Vista32/7
Consumption rate	1GB/40 mins